

7"IPS Quad Core

MODEL: USFT60U7BLK

16
GB



Quick Start Guide




Attention:

This handbook contains important security measures and the correct use of the product information, in order to avoid accidents. Pls make sure to reading the manual carefully before use the device.

1. Please don't be in high temperature, moisture or very dust place
 2. Please don't be in high temperature, Especially in summer don't put the device in the car when Windows closed.
 - Avoid fall or Violent collision of the device, don't make the TFT display screen were violent tremor, This could cause TFT display screen abnormal or damage.
 - Please choose the appropriate volume, Use headphones should not be too big volume, If feel tinnitus, Lower the volume or stop using it
 - please charge In the following condition,
 - 4 The battery power ICONS shows have no power
 - 5 The system automatically shut off, startup after power off soon
 - 6 Operation buttons no response
 - 7 The machine that the top right corner show red icons
-
1. When the device in the format or ongoing upload and download file, please don't suddenly disconnect, This could cause application error.
 1. For those who because of damage to the product, repair, or other causes of erased the memory, The company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.
 2. Don't disassemble the product, don't use alcohol、Thinner or benzene to scrubbing products
 3. Don't use the device one of the place of prohibit to use electronic equipment in regional (such as the plane)
 4. Please don't using the Tablet PC when you in driving or walking down the street,
 5. USB just only be used for data transmission

Tablet Part

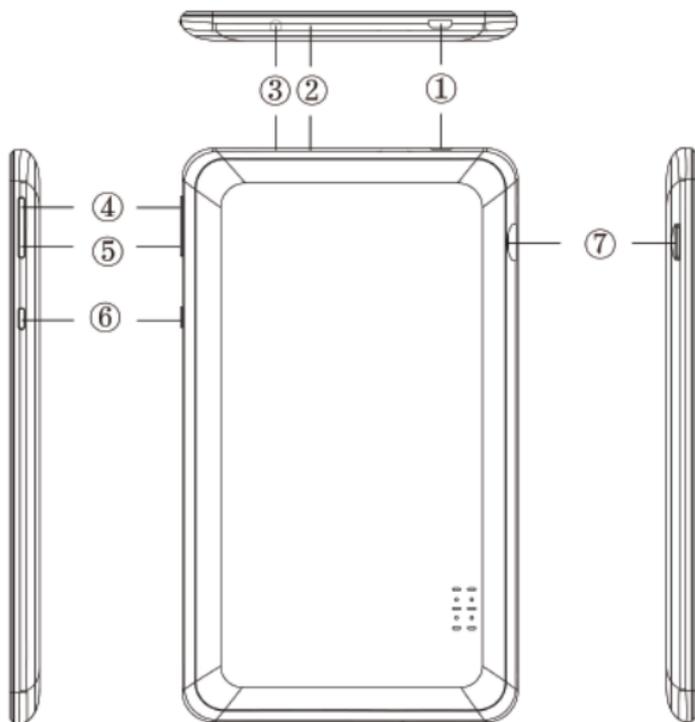


Name	function
1 Micro USB	P Connect to a computer via a USB cable to transfer data (music,videos,photo,ect.),USB OTG,supports mouse, Keyboard, USB flash disk,etc,with a converting cable.
2 Reset	press RESET button,Tablet will force to shutdown
3 Earphone Jack	To connect your earphone
4 Volume +	Press to increase the volume
5 Volume -	Press to decrease the volume
6 Power and lock Key	Hold and press to turn on or turn off the unit,Briefly press to turn on or turn off the screen.
7 MICRO SD card slot	To insert your TF card

Getting Started

Battery Charging

The tablet has a built-in rechargeable Li-polymer battery.

2. To charge connect the AC power adapter to the USB jack on the right side of the tablet.
3. The battery icon shows the battery status and charging status

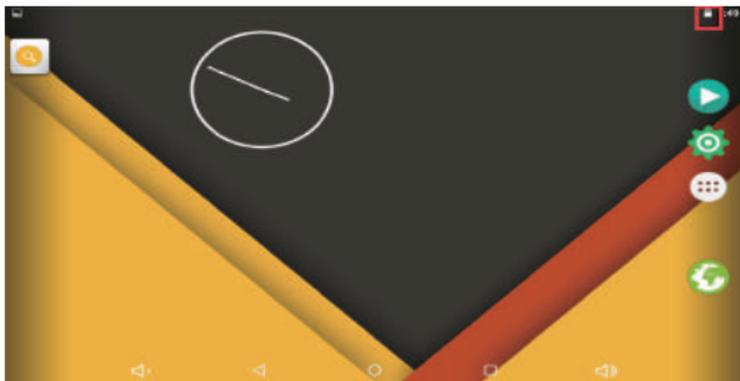

4. The tablet can be used even if the battery is being charged.
the above icons indicate the different level of electricity left in the battery
5. no replacement of battery without authorization, or the explosion hazard might happen.
6. Recharge it for at least half hour if it has been idle for long time and fails to start itself.
7. Regularly recharge it at least one time monthly
8. $40^{\circ} - 5^{\circ}$ is the optimum temperature for the battery recharging or the battery performance might deteriorate slightly

Disposal

the battery might contain the polluting material, please give it to the official recycling-station before disposing the tablet pc, and don't litter.


Power ON/OFF

ON:

press the  button for continuous 5 seconds until the tablet turns "ON".

OFF:

1. Press the  button for continuous 5 seconds and it will appear

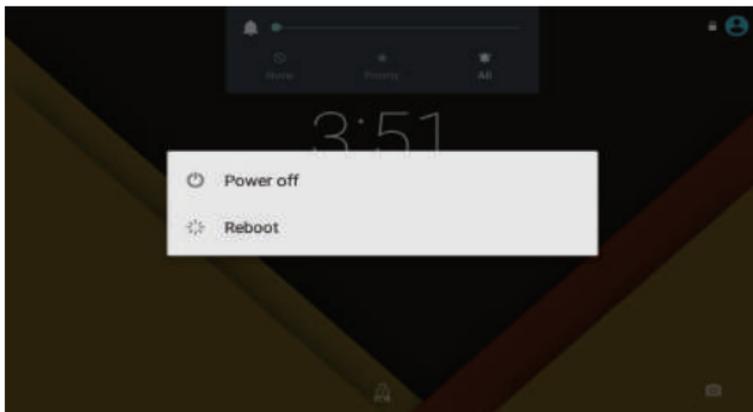

2. Click Power off to power off the tablet

 
Screen Lock

This feature locks the screen, at the same time turn OFF the screen's backlight after a few seconds.

Screen locks when:

1. System is idle.
2. Manually activated by pressing the Power button once.

Screen unlock :



Home screen

The Home screen will look similar to the picture below. It is actually five screens, each of which can have a different layout of icons. To switch between screens, simply slide your finger left or right across the display. The status bar and navigation buttons are always visible, no matter which Home screen you can currently viewing.



The Desktop contains shortcuts to your most-used applications and widgets. Touch the screen icon to quickly search the World Wide Web using Google.

The  icon will launch the Application menu.

The status bar displays system information, such as current time and battery. Touch to Expand the status bar for more detailed information.

The  button moves back one step to the previous menu/page.

The  button returns immediately to the Android desktop.

The  button displays a menu of recently opened applications.

The  button decreases the volume.

The  button increases the volume.

Settings Menu

The settings menu allows you to adjust Tablet system configuration.

To change settings:



1. Touch the "Settings" menu icon on the Application menu. The Settings menu will open.
2. Guide your finger up or down the left side of the screen to scroll through the list of available categories.
3. Touch a category title to view further options on the right side of the screen.

Wi-Fi - Connect to /disconnect from wireless networks, view connection status

Data usage - Enable / disable mobile data, view current usage, set mobile data limit (note: this function is available only on devices supplied with 3G card)

Sound - Change volume, touch sound, screen lock sounds etc

Display - Change brightness, wallpaper, sleep settings, font size etc

Storage - Manage NAND and Micro SD card, view available capacity etc

Battery - See battery status and powered-on time

Apps - Manage applications, running services etc

Accounts & sync - Switch synchronization on /off, manage accounts etc

Location services - Change approximate location detection, improve search results

Security - Change screen lock type, encryption, password, credential storage etc

Language & input Select language, add to the dictionary, edit on-screen keyboard settings, vocal search, etc

Backup & reset - Backup & restore data, perform factory reset, etc

Date & time - Set date, time zone, time, clock format etc

Accessibility - Set up large text, auto-rotate screen, speak password etc

Developer options - Advanced functions for Android developers - debugging, HDCP check etc

About tablet - Information about your Android device

How to Use TF card

1. Insert the TF card into the TF card slot. Gently push TF card into slot until it clicks into place.
2. A prompt will be seen on the screen saying " Preparing SD card "

Removing TF card

6. Close all applications and documents which have been opened from the TF card.
7. Select “Setting” and find “ Storage” then click “Unmount SD card”.
8. A prompt will be seen on the screen saying “ SD card safe to remove”
9. Gently press the TF card to remove and pull out the TF card.

Note: Insert the TF card in correct position, otherwise it will damage the card and the slot.

Software Keyboard

The tablet has a software keyboard which automatically show up when you tap the place on screen where text or number are to be entered.

Touch Screen

The touch screen responds to finger touch.

Note: don't place any object on the touch screen for it may damage or crush the screen.

Single Click: single click one icon to choose the icon or option you want.

Long Press: press and hold one icon to make appear a menu related to the executed function (if available).

Drag: drag on the screen and you can move between magic cube sides or drag the application icons into the shortcut bar.

How to connect with computer

Note: Turn on your Tablet before connect the Tablet to PC by USB cable.

1. Use USB cable to connect MID with computer. System will notice USB connected on bottom of screen.
2. Press USB connected to pop up, then click Turn on USB storage, click OK.
3. Then the USB connection has been successfully.



Connection to Internet

Wireless:

3. Select “ Settings”
4. Select “Wi-Fi” and slide OFF to ON status.




5. All detected wireless networks in the area will be listed, Click to select desired wireless connection.
6. Enter WEP key or network key if necessary.
7. Once connected to a wireless network, settings will be saved
8. Wireless icon will appear on the taskbar when connected successfully.

Note: when the tablet detects the same wireless network in the future, the

device will connect to the network automatically with same password record.

Web Browsing

Connect to the internet and launch the browser.

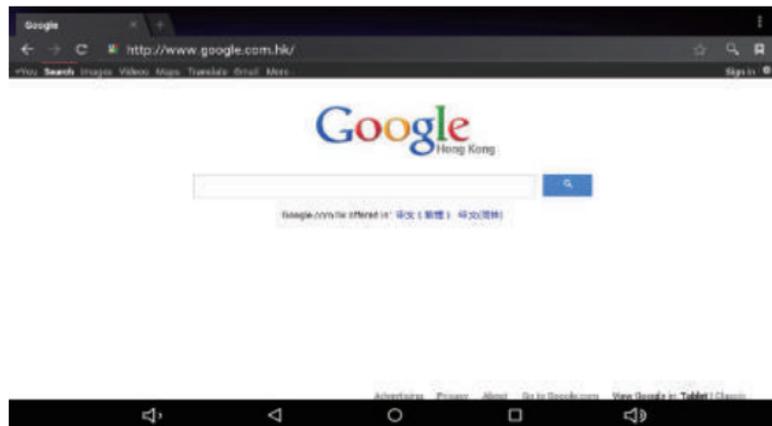

Camera



Touch the icon to enter camera mode and the interface is shown as follows:



1. Touch the icon  in the middle to take photo
2. Touch the icon  and you can switch camera mode to camera recording mode.

Trouble Shooting

Close Application

All running applications take up system memory and will slow down system response. Please shut down all **idle applications** to release memory and get the system speed back to normal.

To close the application, click the icon  on the shortcut bar to enter the system configuration interface. Select the **Application** → **Running services** and the interface is shown as follows:



Tap the application you want to close. A pop-up window will be displayed. Tap “Stop” to close that application.

Mandatory Power off

1. Press and hold the power button for 5 seconds and the device will be powered off.
2. Press the reset button on the back and the device will be forced to be powered off.

Restore Default Setting

If you want to reset the factory setting and erase all materials, please press **Settings** → **Privacy** → **Factory data reset**.

**** Warning: Factory data reset setting will delete your data and configuration of system and applications from downloading.**

**Please use this function carefully.

Specification	
OS	Android 6.0
CPU	Allwinner A33, Cortex-A7 Quad-Core@1.3GHz
SDRAM	DDR3 1 GB
Display	7" 1024*600 IPS
Multi-touchscreen	Yes : 5 point multi-touch
Storage	16 GB
Audio port	3.5ø earphones
USB port	1 x 5pin micro USB port (support USB host and OTG)
Micro SD	Micro SD card
OTG port	Same with USB port
Button	Power, VOL-, VOL+
Speaker	1.0W, Frequency response : 20Hz – 20k Hz, N/S : >85%
G-sensor	Yes
Camera	0.3M pixel (front)
Wi-Fi	802.11b/g/n
Power	Adaptor 5V - 1.5A
Battery	3.7V/2200mAh Li-Polymer
Dimension	190 x 110 x 9.5 mm



Visage Telecom Pty Ltd | PO Box 802, Mount Waverley VIC 3149
1300 788 353 | ABN: 15 136 057 531